


BBOXPFDSTO100-300

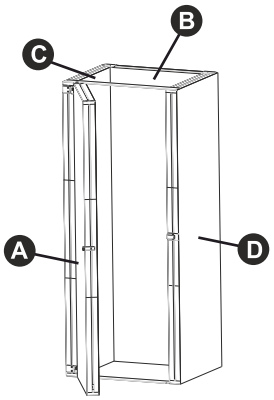


1 Slide in door parts

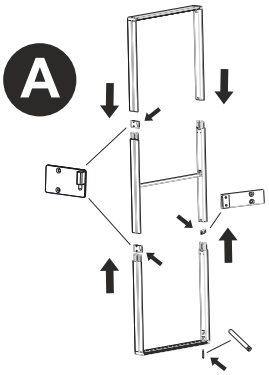


2 Tighten screws

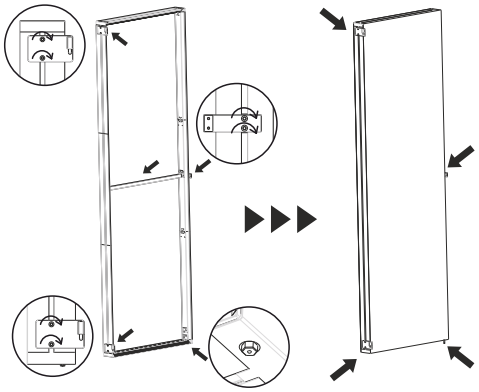


3 Setup frame B

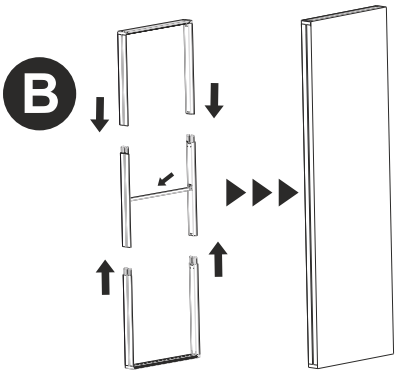


4 Slide in door fixings

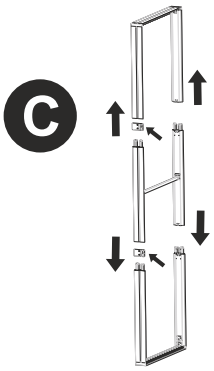


5 Tighten screws

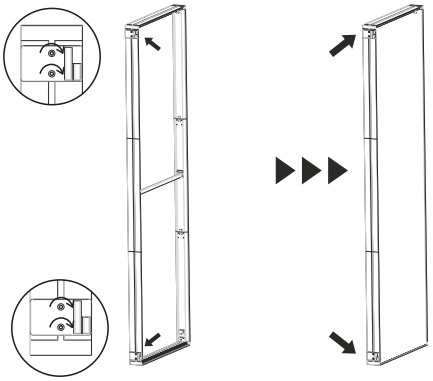


6 Slide in lock

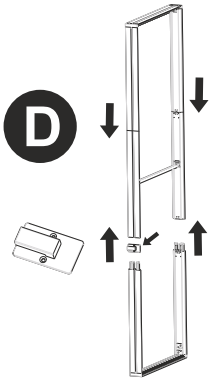


7 Tighten screws

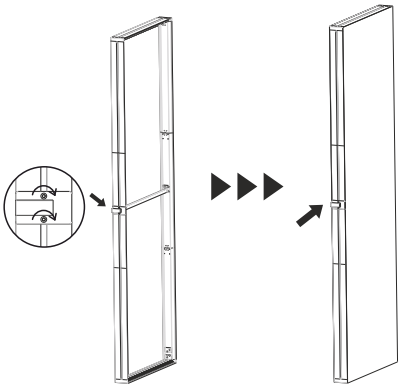


Step 1

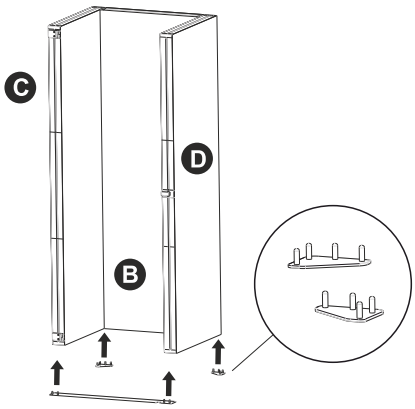


Step 2

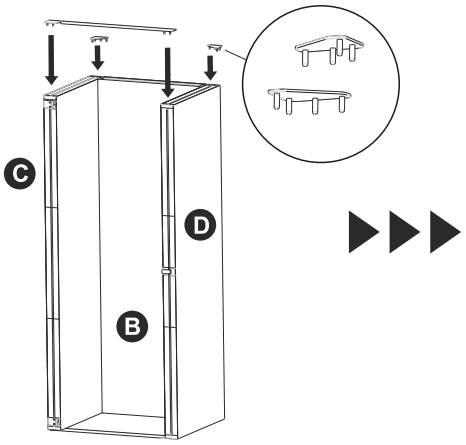

Step 3

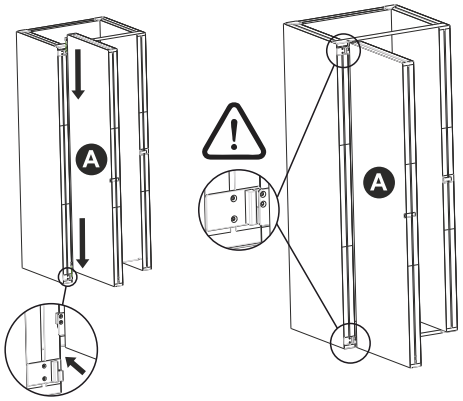

Step 4 Install lock and setup password

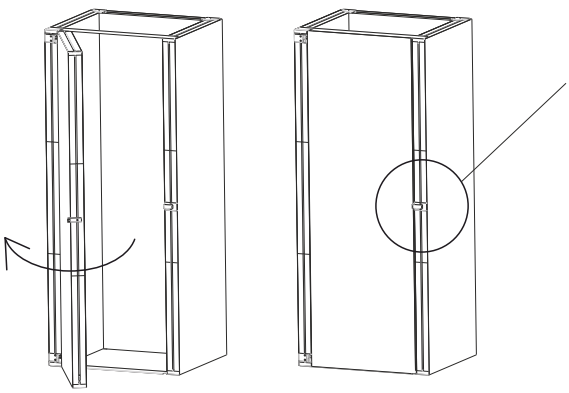

Tighten screws



Push the red switch upward to enter reset mode.
Set your new password by rotating the dials.
Once complete, push the red switch back down to confirm.
Default Code: 000

Disassemble in the reverse order. Make sure the graphic is stored neatly in bag after using, to avoid wrinkle.

ASSEMBLY